

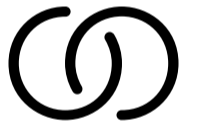
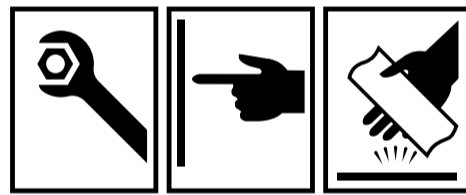


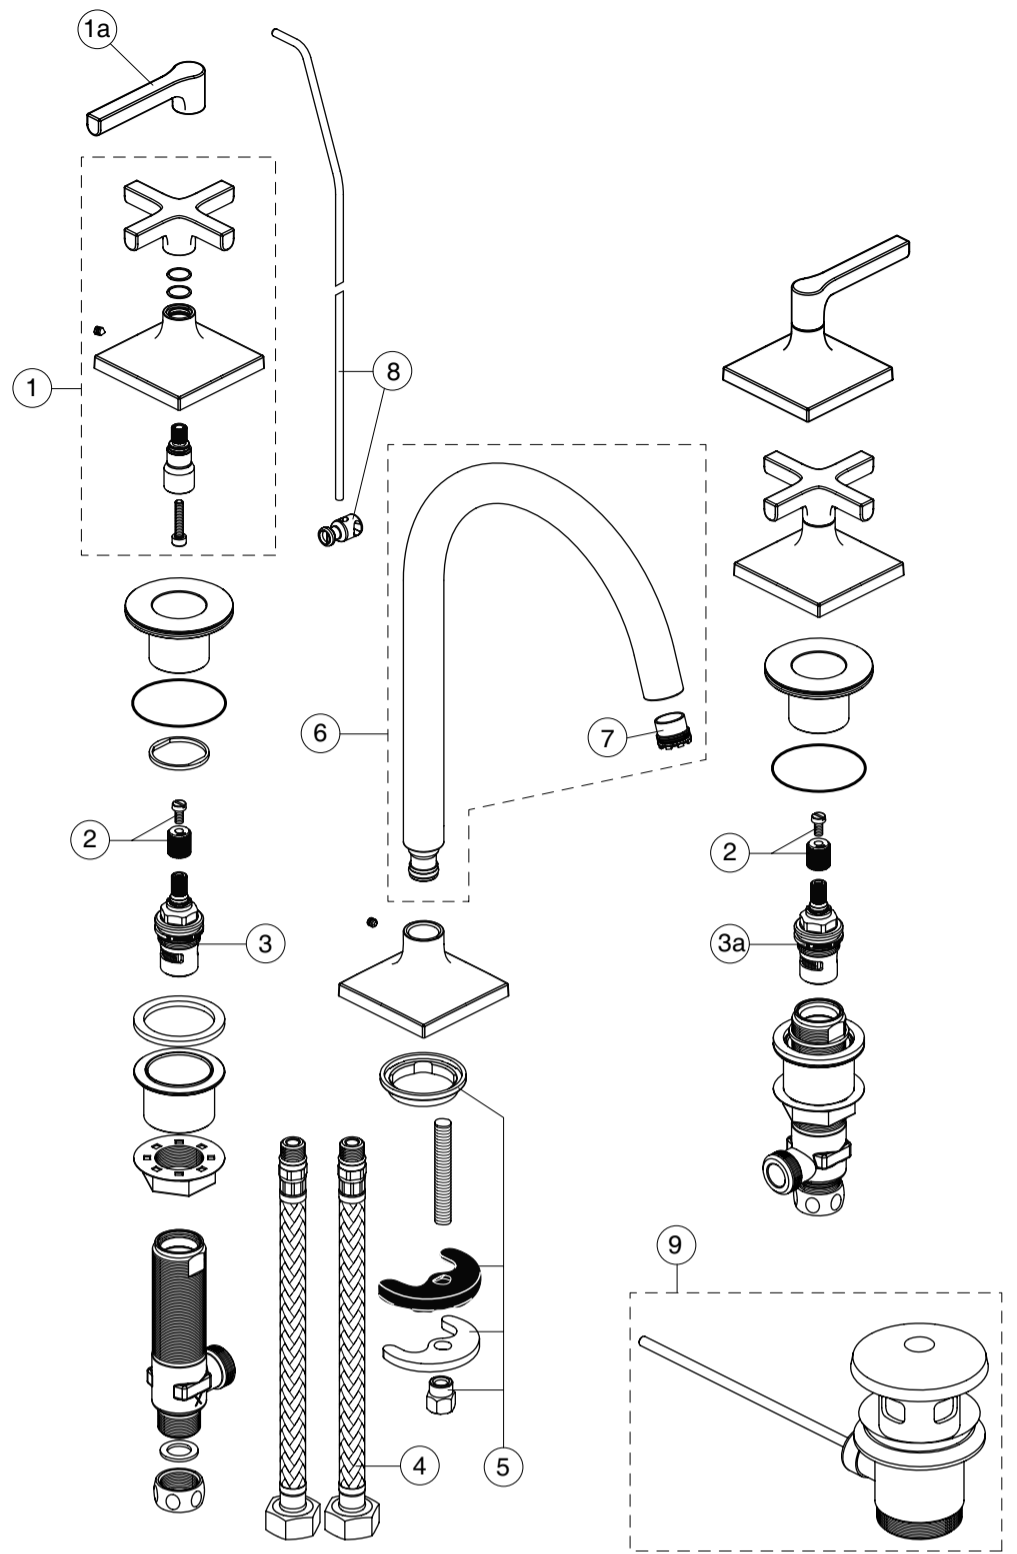

Ordering spares / Ersatzteil - Regelung / Pièces de rechange / Parti di ricambio / Lista de recambios / Onderdelen bestellen (NL/B) / Κωδικοί Ανταλλακτικών / Bestilling af reservedele / Beställning av reservdelar / Bestilling av reservedeler / Резервни части / Запчасти / Części zapasowe / Piese de schimb / Rendelhető alkatrészek / Запасні частини / Резервни делови / Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezerves daļas / Náhradní díly / Náhradné diely / Yedek parça siparişi / Nadomestni deli

XX = AA, AD, .....


- 1 - B 961752 XX
- 1a - B 961754 XX
- 2 - A 861446 NU
- 3 - A 861243 NU - LH
- 3a - A 861244 NU - RH
- 4 - B 960389 NU
- 5 - A 964520 NU
- 6 - B 961769 XX
- 7 - A 962708 NU
- 8 - B 960900 XX
- 9 - A 961230 XX

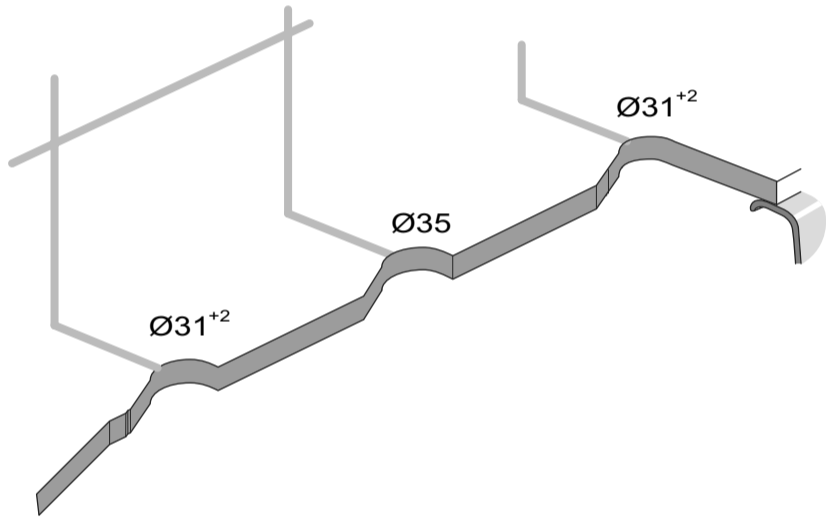


Ideal Standard

JOY NEO


11.2024 / B565157

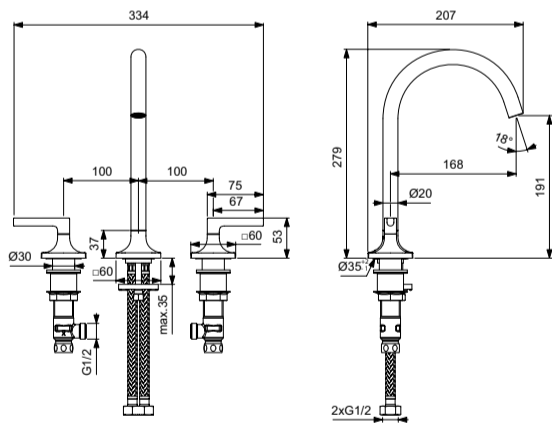


B D146 ..

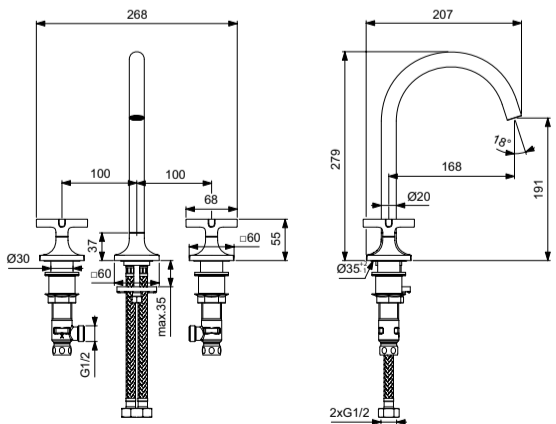


B D145 ..

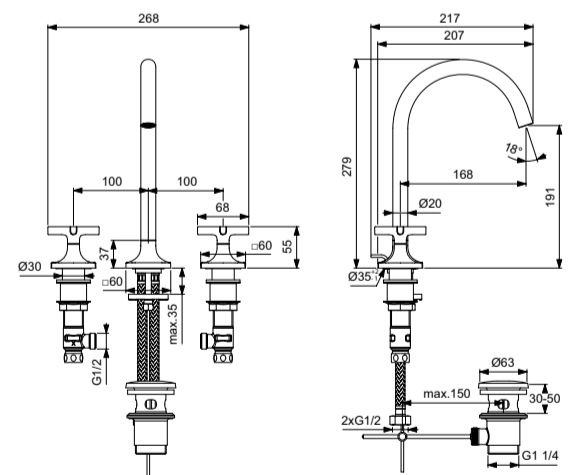


B D143 ..





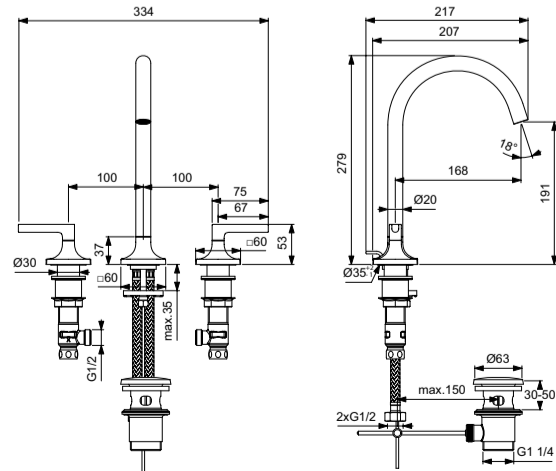


B D144 ..

 

Ideal Standard International NV  
Corporate Village – Gent Building  
Da Vincilaan 2  
1935 Zaventem  
Belgium  
<https://www.idealstandard.com>

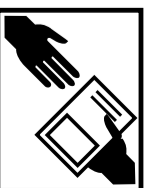

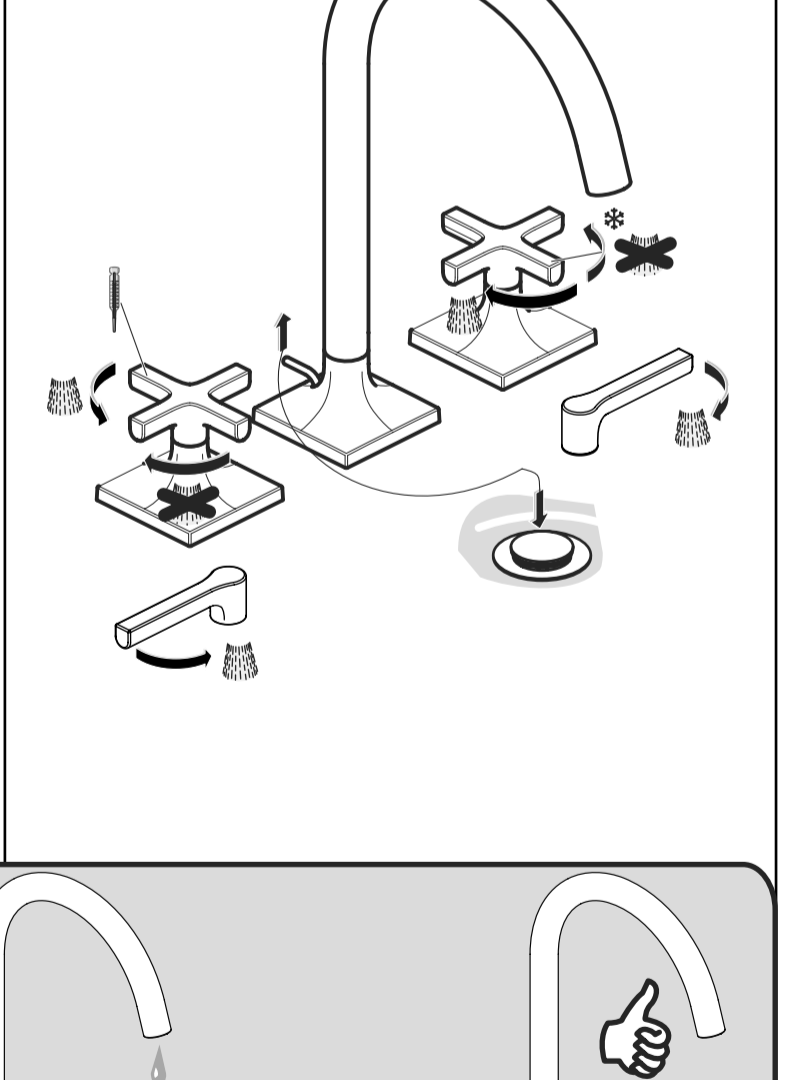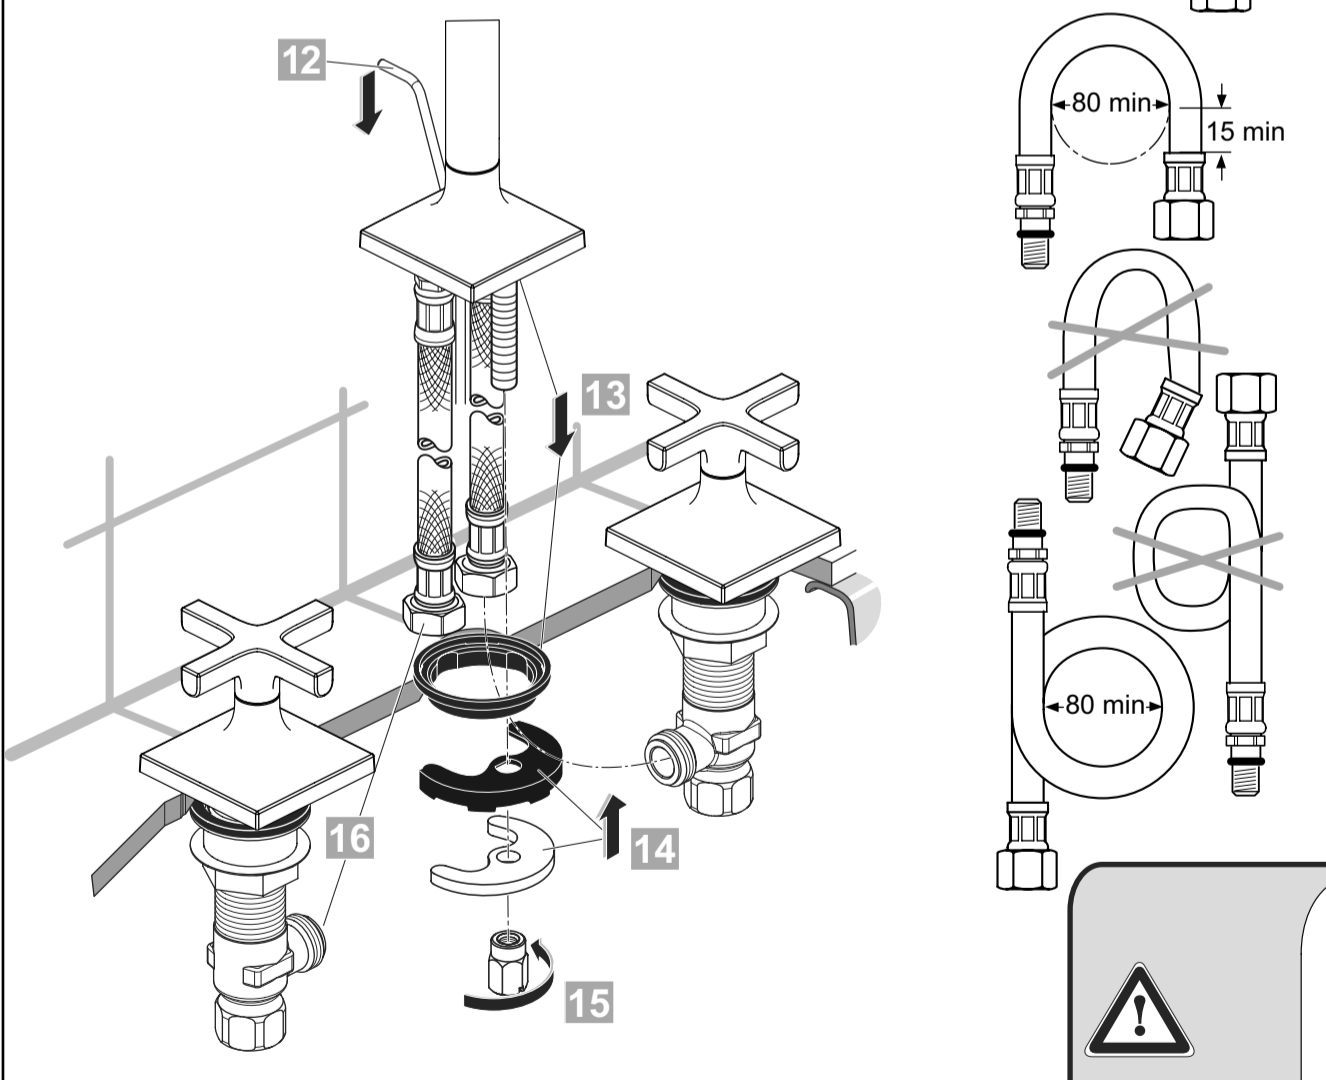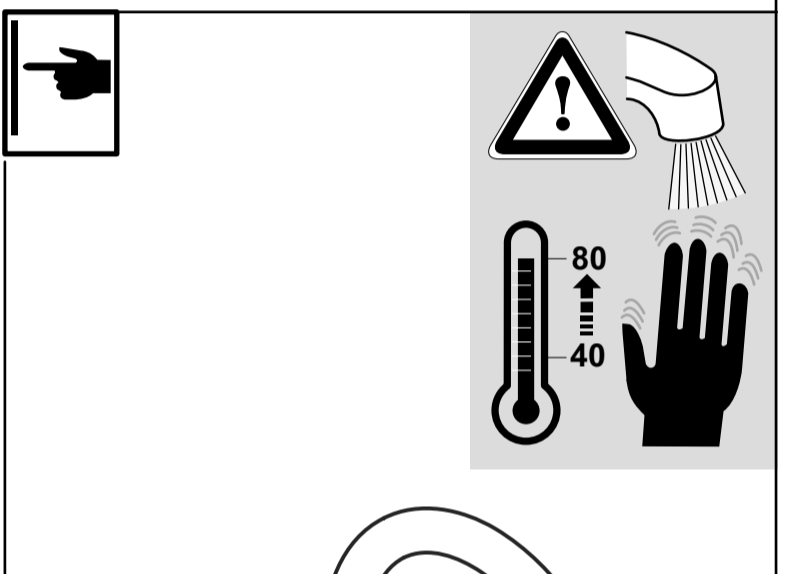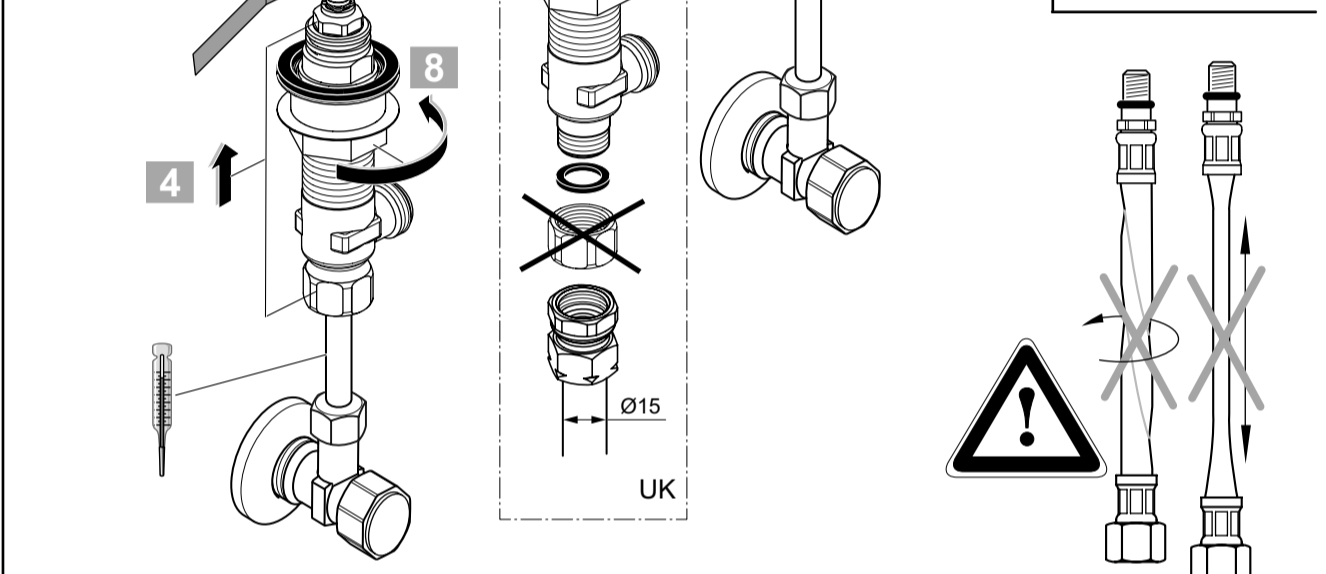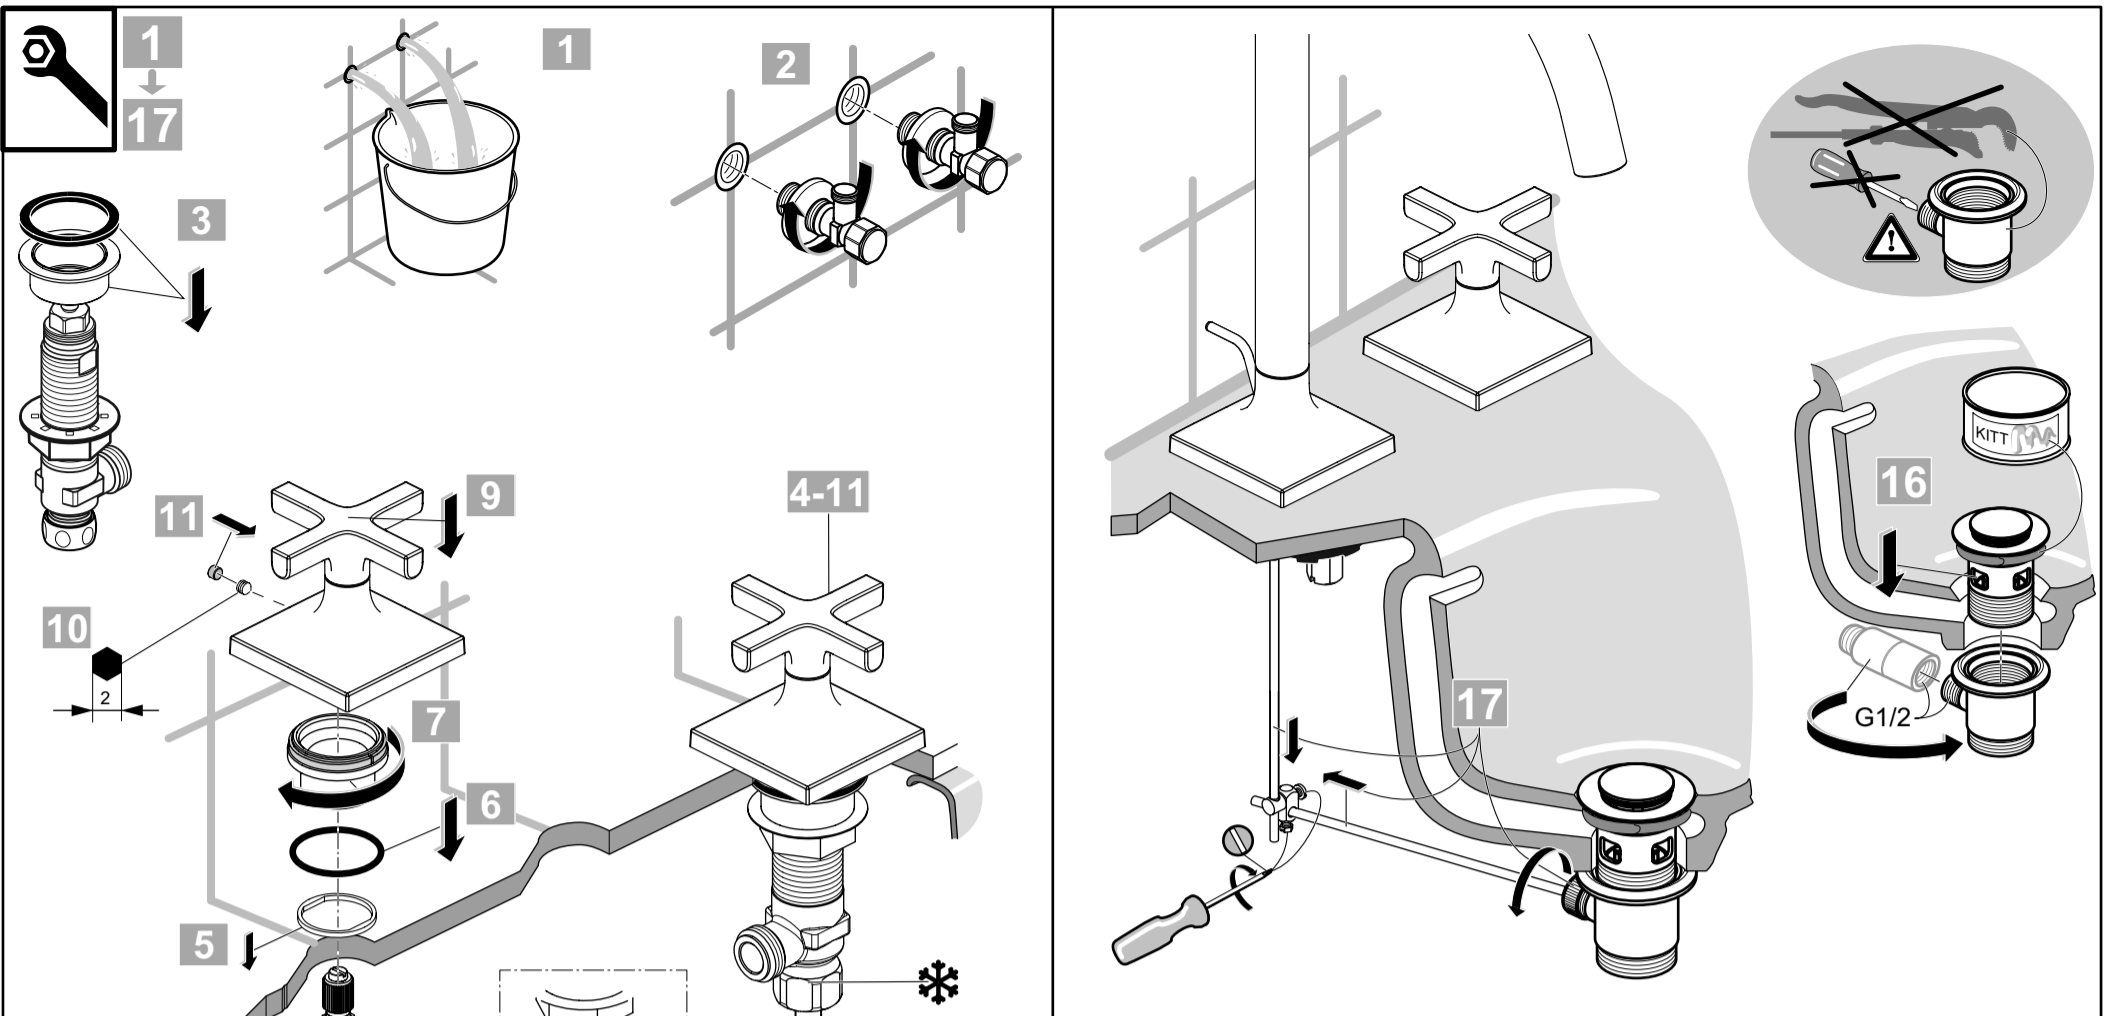

	<b>P</b> bar				<b>Q</b> (3 bar)
	<b>T</b> °C				<b>l/min</b> 5

